



CONGRATULATIONS

You're now the proud owner of a gaming mouse that can perform all those core functions at the touch of a button – all without needing to install drivers. It doesn't matter whether you're a right or left-hander, this mouse gives you total freedom. Once plugged in, every function is available for use – regardless of whether you use a Mac® or Windows® PC.

Hardware-based configuration mode

No long-winded driver configuration means no stress. The ROCCAT™ Kova can be adjusted to suit your needs at the press of a button – and all completely driverlessly. The 5(+2) mouse buttons are preconfigured with the most important functions for any software application or game.

ROCCAT™ Griptech side areas

Despite its compactness, the ROCCAT™ Kova features special Griptech side areas for left and right-handers alike. These stabilize mouse handling and boost grip in particularly heated gaming situations. Along with the Griptech side areas, the mousewheel also features a non-slip coating.

Customizable light system

Here too you can change colors or the light effect in a second. Get your ROCCAT™ Kova to light up in a variety of legendary colors. The discreetly integrated LEDs on the sides of the mouse cast an atmospheric aura over the desktop, particularly when you activate the 'breathing' function.



SPECIFICATIONS

PACKAGE CONTAINS

- ROCCAT™ Kova – Pure Performance Gaming Mouse
- Inari Case Mission Book with ROCCAT ID Card
- Quick Install Guide

SYSTEM REQUIREMENTS

 
- Windows® XP/Windows Vista®/Windows® 7/Mac OS® X or higher
- USB 1.1 Port

TECH SPECS

- 3200dpi optical gaming sensor
- 40 inches per second maximum speed
- 20G acceleration
- 2m USB cable

ORGANIZE YOUR DESKTOP WITH ROCCAT™ SDMS

MORE INFO ON WWW.ROCCAT.ORG/SDMS

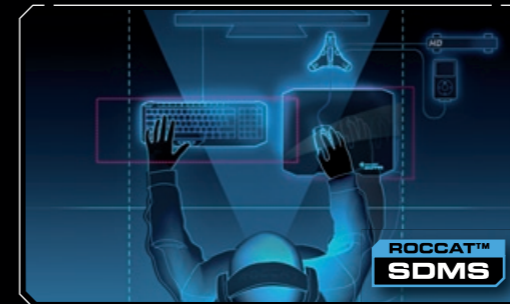

QUICK INSTALLATION GUIDE

IMPORTANT DOCUMENT

© 2010 ROCCAT GmbH. All rights reserved. Any product names mentioned in this manual may be trademarks or registered trademarks and are the property of their respective owners. Information contained herein is subject to change without notice. ROCCAT GmbH shall not be liable for any errors that may appear in this manual. This publication or parts of it may not be reproduced without the express consent of the publisher.

 
ROCCAT GmbH
 Otto von Bahrenpark
 Gasstrasse 6b, Building N
 22761 Hamburg
 Germany

WWW.ROCCAT.ORG/SUPPORT


Should you need assistance ...
 Our support team will help you with any technical problems –
 just send us an email (support@roccat.org) or visit our website:



1 CONNECT TO COMPUTER (USB)

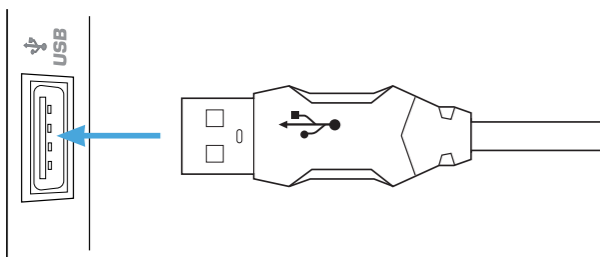

2 SWITCH HAND MODE

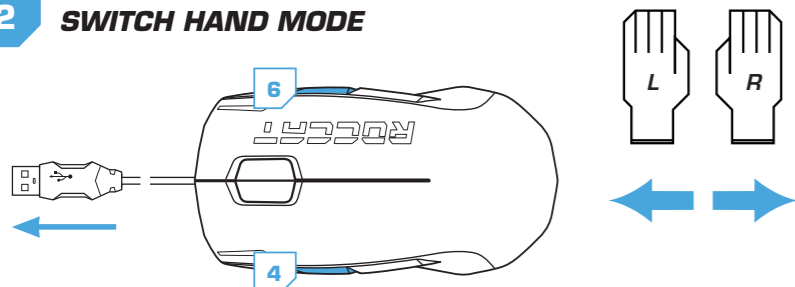 

PRESS 4 + 6 DURING PLUG IN = Change hand mode from right- to left-handed and vice versa

3 STANDARD BUTTONS (right-handed mode)

1 = Left Mouse-Button

2 = Right Mouse-Button

 
3 = Third Button + Universal Scroll

4 = Browser - Forward


5 = Browser - Backward

6 = Combination Button

7 = Combination Button

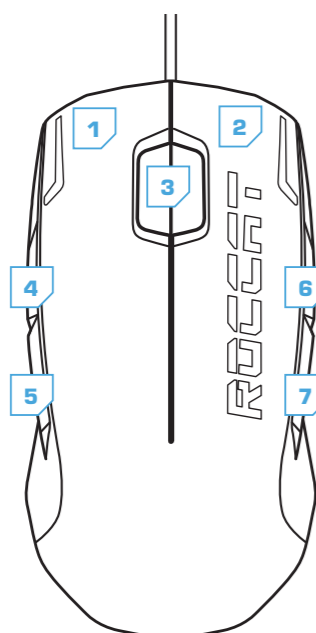

4 CHANGE LIGHT EFFECT

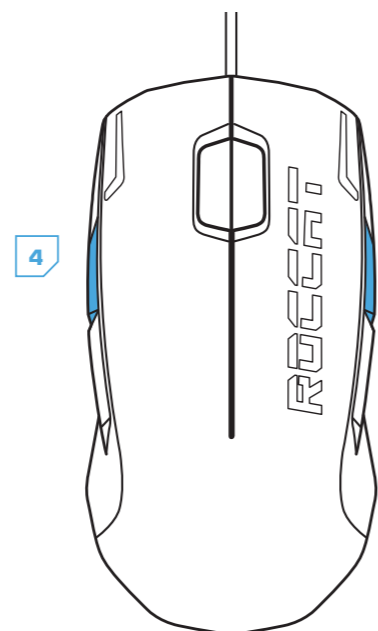 

PRESS 4 + 6 = Setting the light effect to 'breathing', full or no illumination

5 CHANGE DPI

 
LED FEEDBACK:

400dpi
flashes red

800dpi
flashes violet


1600dpi
flashes green

3200dpi
flashes blue

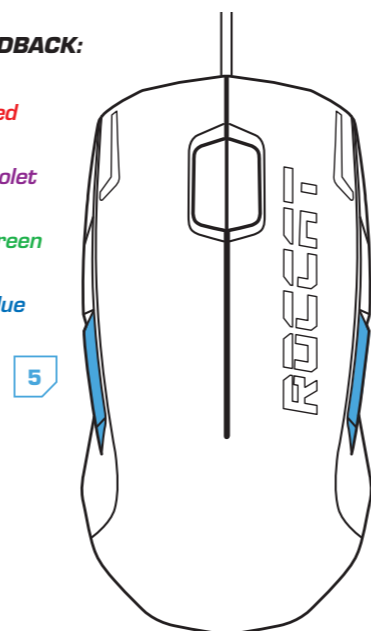


PRESS 5 + 7 = Setting the resolution to 400, 800, 1600 or 3200dpi

 6 CHANGE BREATHING MODE

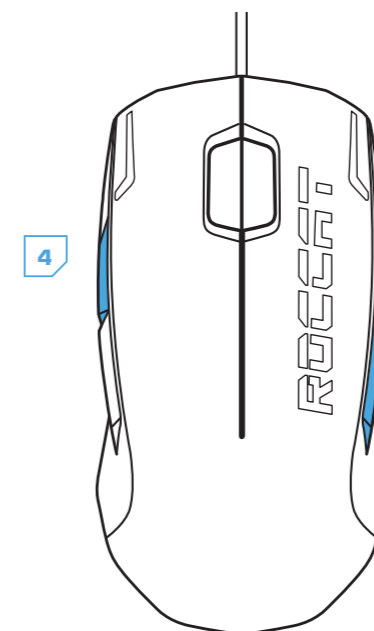

PRESS 4 + 7 = Setting the 'breathing' mode to change color after one, two or three 'breaths', or holding the color after each 'breath'

 7 CHANGE COLOR

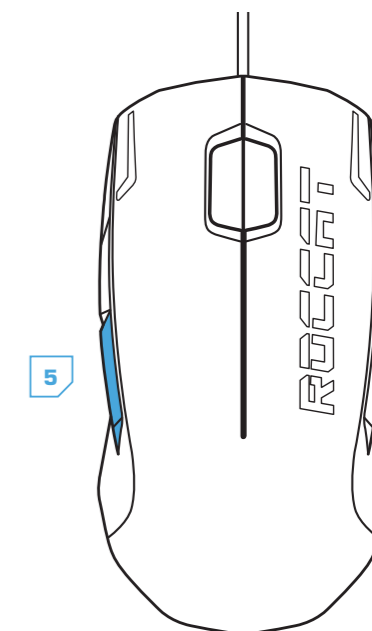

PRESS 5 + 6 = Switching from one color to another

EN

1. Plug the ROCCAT™ Kova's USB connector into any free USB port.
2. Press buttons 4+6 at the same time when plugging it in to switch between right and left-handed mode.
3. Default button configuration (right-handed mode)
4. Setting the light effect to 'breathing', full or no illumination.
5. Setting the resolution to 400, 800, 1600 or 3200dpi
6. Setting the 'breathing' mode to change color after one, two or three 'breaths', or holding the color after each 'breath'.
7. Switching from one color to another

DE

1. Verbinde den USB-Stecker der ROCCAT™ Kova mit einer freien USB-Schnittstelle.
2. Drücke Taste 4 + 6 beim Anstecken gleichzeitig, um zwischen Rechts- und Linkshänder-Modus zu wechseln.
3. Standardtastenbelegung (Rechtshänder-Modus)
4. Einstellung des Lichteffects zwischen „Breathing“, voller oder abgeschalteter Beleuchtung.
5. Dpi-Einstellungen zwischen 400, 800, 1600 und 3200
6. Einstellungen des „Breathing“-Modus zwischen Farbänderung nach einem, zwei, drei „Breaths“ oder die Farbe nach jedem „Breath“ beibehalten.
7. Einstellung der Farben

ES

1. Enchufa el conector USB del ROCCAT™ Kova a un puerto libre USB.
2. Al mismo tiempo que conectas pulsa los botones 4 + 6 para elegir entre los modos para diestros o zurdos.
3. Asignación de botones estándar (para diestros)
4. Ajustes de los efectos luminosos entre "breathing", pleno o desconexión de la iluminación.
5. Configuración dpi entre 400, 800, 1600 y 3200
6. Para ajustar el modo "breathing" entre cambios de color, tras uno, dos o tres "breaths" o para conservar el color tras cada "breath".
7. Ajuste de los colores.

JP

1. ROCCAT™ Kova's USB コネクタを空きUSBポートに差し込んでください。
2. 右利き / 左利きモードを切り替えるには、差し込む際にボタン 4と6を同時に押してください。
3. デフォルトの設定は(右利きモード)です。
4. 照明効果を点滅、点灯、照明なしのいずれかに設定してください。
5. 解像度を400、800、1600、3200dpiのいずれかに設定してください。
6. 点滅モードを点滅1、2、3回後で色を変更するか、それとも各点滅後に色を変更しないかを設定してください。
7. 色に赤、オレンジ色、黄色、青、ROCCATブルー、ピンク、もしくは紫を設定してください。

KO

1. ROCCAT™ Kova USB커넥터를 모든 사용가능한 USB포트에 플러그한다.
2. 버튼 4+6을 동시에 누르고, 플러그하여, 오른손과 왼손 모드 간에 스위칭한다.
3. 디폴트 버튼 환경설정(오른손 모드)
4. 광효과를 '잠시', '완전밝기' 혹은 '조명없음' 등으로 설정한다.
5. 해상도를 400, 800, 1600 혹은 3200dpi로 설정한다.
6. '잠시' 모드를 한번, 두번, 혹은 세번 '숨쉬기' 후에 컬러가 변화하도록 설정한다. 혹은 매번 '숨쉬기' 후에 컬러를 유지하도록 설정한다.
7. 컬러를 빨간색, 오렌지색, 노란색, 파란색, ROCCAT블루, 핑크색 혹은 보라색으로 설정한다.

RU

1. Вставьте USB-штекер ROCCAT™ Kova в свободный USB-порт.
2. Одновременно нажми кнопки 4 + 6 при подсоединении, чтобы осуществить переход между режимами для правой и левой.
3. Стандартная раскладка клавиатуры (режим для правой)
4. Настройка световых эффектов: режим „Breathing“ (дыхание), режимы полного освещения и без освещения.
5. Регулирование dpi между значениями 400, 800, 1600 и 3200
6. Настройка режима освещения „Breathing“ – изменение цвета после одного, двух, трех „Breaths“ или сохранение цвета после каждого „Breath“.
7. Настройка цветов.

SC

1. 將ROCCAT™ Kova的USB连接器插入任一空闲USB端口，
2. 插入时，同时按下4、6键，在右手和左手方式间切换，
3. 默认按钮配置为右手方式，
4. 将灯光效果设为“呼吸闪烁”、全亮或全暗，
5. 将分辨率设为400、800、1600或3200dpi，
6. 将“闪烁”方式设为“闪烁”一次、两次或三次后变色，或每次“闪烁”后保持同一颜色，
7. 将颜色设为红、橙、黄、蓝、ROCCAT蓝、粉红或紫色。

TC

1. 把ROCCAT™ Kova上的USB連接頭插入電腦上的USB接口；
2. 插入USB口的同時按住按鍵4與按鍵6，可切換左右手模式；
3. 滑鼠預設值為右手操控模式；
4. 設定燈光效果為“呼吸閃爍”、全亮或全暗；
5. 設定滑鼠解析度為400、800、1600或是3200dpi；
6. 呼吸閃爍模式可設定為呼吸一、二或三次之後再做顏色改變，或者在每一次呼吸之後維持同一個顏色；
7. 可將顏色設為紅、橘、黃、藍、ROCCAT藍、粉紅或紫羅蘭色。

TH

1. เสียบตัวเชื่อมต่อ USB ของร็อคแคทโควา (ROCCAT™ Kova) เข้ากับพอร์ต USB ที่ว่างตัวใดตัวหนึ่ง
2. กดปุ่ม 4+6 ในเวลาเดียวกันกับที่เสียบปลั๊กมันเข้ากับสวิตช์ระหว่างโหมดถนัดขวาและถนัดซ้าย
3. คำนึงปุ่มดีฟอลต์ (โหมดถนัดขวา)
4. ตั้งค่าเอฟเฟคแสงเป็น "พักผ่อน" เรืองแสงเต็มหรือไม่มีเรืองแสง
5. ตั้งค่าความละเอียดเป็น 400,800,1600 หรือ 3200 dpi
6. ตั้งค่าโหมด "พักผ่อน" เพื่อเปลี่ยนสีหลัง "พักผ่อน" หนึ่ง สอง หรือสามครั้ง หรือคงสีไว้หลังสีทุกครั้ง "พักผ่อน"
7. ตั้งค่าสีเป็นสีแดง สีส้ม สีเหลือง สีน้ำเงิน สีน้ำเงินหรือแคท สีชมพูหรือสีม่วง

VI

1. Cắm bộ nối USB của ROCCAT™ Kova vào bất cứ cổng rãnh rỗng nào
2. Bấm đồng thời nút 4 + 6 khi cắm vào để chuyển đổi giữa chế độ tay trái và tay phải
3. Cài đặt nút mặc định (chế độ tay phải)
4. Chọn hiệu quả đèn "breathing", chiếu sáng 100% hoặc không chiếu sáng
5. Chọn giải pháp 400, 800, 1600 hoặc 3200dpi
6. Chọn chế độ "breathing" để đổi màu sau khi hiển thị 1, 2 hoặc 3 cái "breaths", hoặc giữ lại màu sau mỗi lần "breath"
7. Chọn màu đỏ, cam, vàng, xanh da trời, xanh ROCCAT, hồng hoặc tím.