



2ième génération



Audio Revolution In A Box

Instruction Manual English
Manuel d'instruction French
Bedienungsanleitung German
Manual de instrucciones Spanish

설명서 Korean
取扱説明書 Japanese
使用说明书 Chinese
Manual de instruções Portuguese

Introduction

Congratulations on your purchase of X-mini™ product. The X-mini™ II Capsule speaker comes with vastly improved features yet retaining the best characteristics from its first generation, the 2nd generation comes packed with properties that will bring a greater audio experience to its user.

Introducing a larger 40mm driver, the X-mini™ II projects richer and crispier sounds resulting in a greater user experience from its innovative capsule design. Be it for individual or group entertainment, the X-mini™ II is the perfect enhancement to your own music jukebox.

Safety Rules

- 1) Please follow the rules depicted in this manual closely to ensure your safety. Before using the speaker, we would strongly encourage you to read through this user manual.
- 2) Be more wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injury or damage.
- 3) Keep this speaker out of reach of children. Take note that this speaker is not edible and should not be placed in your mouth.
- 4) Do not modify, repair or dismantle the speaker. Doing so may result in fires, electric shocks, complete breakdown of the speaker, etc. All of which, are not covered under warranty.
- 5) Do not use any diluents or volatile liquid to clean the speaker. Keep in mind that the surface of the speaker should only be wiped with a clean dry cloth.
- 6) Do not use this speaker in locations whereby there are high-temperatures or high humidity levels (For instance, bathrooms); ideally, the speaker should be used in a location free of dust and exposure to direct sunlight.
- 7) Do not insert foreign objects, such as pins, into this speaker.
- 8) Do not touch this speaker when your hands are wet as this may result in electric shocks.
- 9) Turn down the volume before/while using this speaker as sudden loud sounds may damage it.
- 10) Refrain from dropping the speaker as well as any collision with other objects.
- 11) Do not use this speaker when in hazardous locations.
- 12) Should any abnormal situations or problems occur while using the speaker, discontinue use of speaker immediately.

 
 
 
Package Contents

The Package will contain the following:

- 1 x X-mini™ II
- 1 x User Manual
- 1 x Input/Audio and Charging Cable
- 1 x Protection Pouch




Connection Diagram

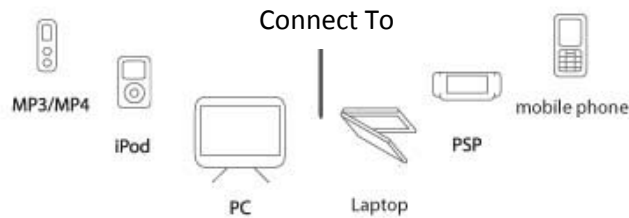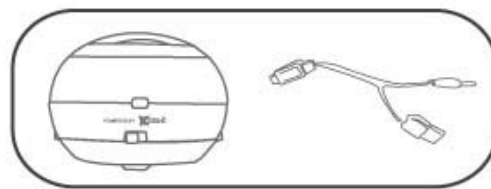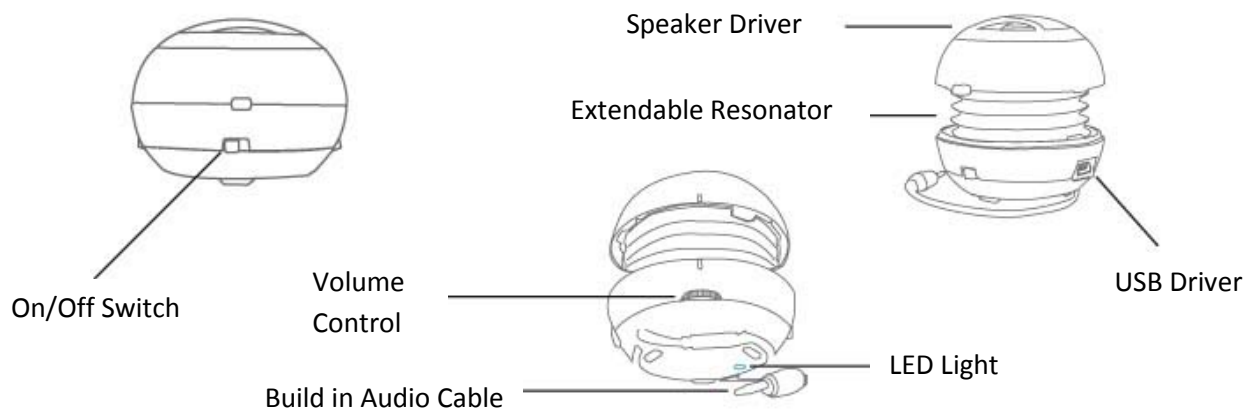


Mode of Usage



 2. Take out the built-in audio cable from the bottom of the X-mini™ II and connect it into any multimedia device with a 3.5mm port

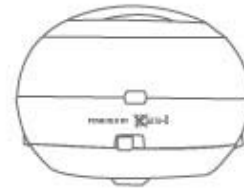


 3. Hold onto the top of the speaker and twist anti-clockwise to reveal the BXS™ resonator

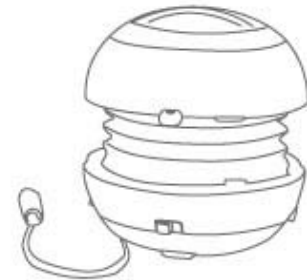

Buddy-Jack™

 This all new system enables you to connect one X-mini™ II to another, capable of forming virtually endless “daisy chain” of self-powered, bass-enhanced portable speaker system. With this feature, you can now combine your X-mini™ II together with your friends’. You may also connect previous generations of X-Minis or even earphones into the Buddy-Jack™ to expand on volume or multi-functionality.

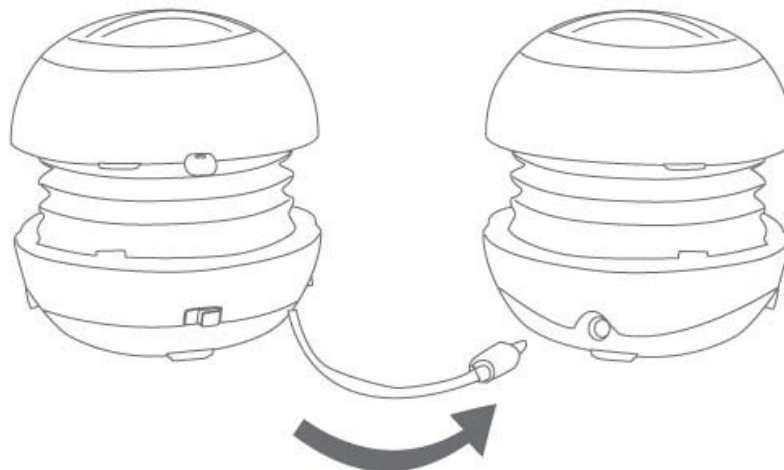

Connect another X-mini™ II into the Buddy-Jack™ to create jaw-dropping audio!

Charging

Connect your speaker to your music player:

Connect part 1 to 2 (mini-USB plug connects to X-mini™ II Capsule Speaker™)

Connects the part 3 to any audio playback devices with 3.5m Stereo jack

Charge speakers system from an USB port while the light turns off.

LED Battery Indicator

When charging:

 
Red – X-mini™ II is charging

Blue – X-mini™ II is fully charged

When in use:

Blue – X-mini™ II is turned on

Blue (dim) – Battery low

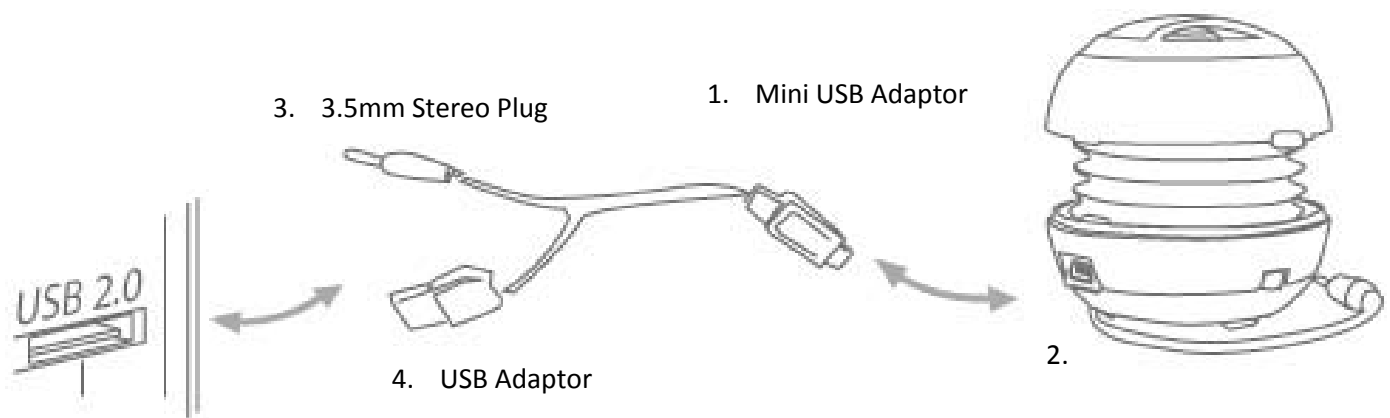

Technical Specification

Dimension	: 55mm × 44mm (closed resonator)
Net Weight	: 83g
Speaker	: Magnetically Shielded 40mm (4Ω)
Loudspeaker Output	: 2W
Frequency Response	: 100 Hz-20 kHz
Signal-to-Noise	: ≥80dB
Distortion	: ≤1.0%
Playback Time	: up to 12 hours
Battery Voltage/Capacity	: 400mAh
Battery Charging Voltage	: 4.2V±0.05V
Battery Charge Time	: 2.5 hours

FAQ

1. Why is there no power even when speaker is turned on?

Ans: Ensure the battery is being charged up to 4 hour. The LED will turn to red color when it starts charging. Please set the volume level of your MP3 to 60-70% of maximum for optimum performance.

2. There is no sound when playing music!

Ans: Check to see if the volume is adjusted too low. If it is too low, turn it up. Make sure that the 3.5mm stereo plug is properly connected.

3. The bass production is missing.

Ans: The vacuum below might be punctured. If so, please check warranty coverage.

4. Is this a USB audio device?

Ans: No, this is not an USB audio device. The USB plug is only for charging. Use the 3.5mm stereo plug for audio inputs.

5. How can I know that the speaker has been fully charged?

Ans: When the indicator LED turns to blue from red, it's been fully charged.

Limited Warranty

1) If within 12 months of purchase this device or any part thereof is proven to be defective by reason of faulty workmanship or defects in materials, we will at our option repair or replace the same free of charge of labor or materials on condition that:

a. The original invoice or sales receipt with the date of purchase, or stamp from the dealer is presented together with the defective unit.

2) The warranty does not cover Product failures which have been caused by use of accessories other peripheral devices which are not X-mini™ branded original accessories intended for use with the Product.

3) The warranty does not cover Product failures caused by:

a. Modification, repaired, and disassembled by any person who is not authorized by the manufacturer.

b. Any defective unit or part shall become property of the manufacturer. The warranty does not cover any damage caused by misuse, drop, hit or neglect.